

Making the world a better place to live, play and enjoy in a healthier way!

SONA Mobion User Manual



Congratulations on your purchase of the **SONA Mobion** / **SONA Mobion Dual**, our proprietary air purification portable unit with dielectric barrier discharge (DBD) technology.

Our best-in-class **SONA Mobion** can be used in a small space up to 200 square feet. It is ideal for a car, truck, motor home or bathroom. It can also be used in a hotel room with included AC adapter.

This manual will help you achieve optimum performance by providing instructions for proper placement and long-term care.

To ensure optimal performance and longevity, please read this manual prior to using the **SONA Mobion**.

INTRODUCTION

The **SONA Mobion** is an advanced premium air purification system comprised of our proprietary DBD technology allowing continuous generation of negative ions. The negative ions effectively break down contaminants at the molecular level rather than masking foul odors.

The **SONA Mobion** works with a special filter that needs to be replaced periodically to deliver long-term top performance.

Measuring $90 \text{mm} \times 75 \text{mm} \times 140 \text{mm} (3.5" \times 3" \times 5.5")$ with solid aluminum body construction, it is the most durable and most heavy-duty portable air purification system on the market for everyday use and outstanding performance.

APPLICATIONS

The **SONA Mobion** provides the ultimate in IAQ IS (indoor air quality improvement system) capacity to handle the most demanding IAQ challenges. This light and portable unit can be used conveniently in your home or business. It is also ideal when traveling for use in both hotels and cars

With up to 5 CFM (8.4 CMH), the **SONA Mobion** is perfect for small scale air purification applications.


Kev Features

- One SONA Cell Plasma Generator
- · Adjustable SONA Cell output levels
- · Detachable power cable for easy servicing
- · Solid aluminum case construction
- Optional SONA Cell Plasma Generator

Benefits

- Reduces particulate matters
- Breaks down volatile organic compounds (VOCs)
- Reduces molds
- Kills viruses
- Kills bacteria
- · Breaks down other harmful contaminants

WHAT'S IN THE BOX



GETTING STARTED

Placing your **SONA Mobion** plays the most important role in cleaning the air in your space.

Cars, vans, trucks, semi-trucks: Place SONA Mobion at bottom of passenger front seat.

RVs: Place **SONA Mobion** facing the kitchen and/or bathroom as high as possible.

Hotel rooms: Place **SONA Mobion** near the entrance door facing inside as high as possible.


Note: Make sure the **SONA Mobion** is not facing the door. This will minimize the performance since the Mobion generated ion clusters will leak out from controlled spaces.

REPLACING FILTER

Replacing the filter is a very important practice in keeping the **SONA Mobion** in top-notch performance. Three (3) filters are included with your purchase. Replace the filter as often as needed or at least once per month. Please contact Healthy Spaces to purchase additional filters.

How to replace the filter.

- Pull open the filter cover located at the back of the SONA Mobion.
- 2. Remove the old filter and replace with new one.
- 3. Snap the filter cover back in place.

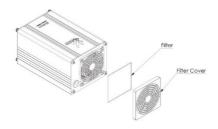

ONE-YEAR LIMITED WARRANTY

Your **SONA Mobion** is warranted to be free of defects in materials and workmanship for one year after the date of purchase. In the event of a defect under this warranty, we will, at our option, repair or replace the product, provided that you return the product postage prepaid. This warranty does not cover damages caused by misuse, improper handling, installation, or maintenance provided by someone other than a Healthy Spaces Authorized Service Technician.

This warranty gives you specific legal rights. You may have other rights which vary from country to country. Contact us for any questions on returns. For products purchased outside the United States or Canada, please contact your local dealer for applicable warranty information.


IN U.S.A. send to: Healthy Spaces Attn: Repairs 123 E. Main Street Phoenix, AZ 85000 (602) 613-4310

ETERNAL WARRANTY

Eternal Warranty is available with subscription service. Please contact:

Healthy Spaces Attn: Warranty 123 E. Main Street Phoenix, AZ 85000 (602) 613-4310

SPECIFICATIONS Dimensions:

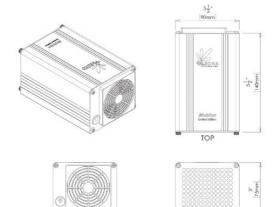

BACK

Air Flow Capacity	Up to 8.4 CMH (5 CFM)
Housing Material	Aluminum (Anodized)
Weight	871 g (1.8 lbs.)
Operating Temperature	-30° ~ 70°C (-22° ~ 158°F)
Voltage	12 VDC
Power Consumption	2.76 Watts; Fan: 1.68 Watts Max.

FRONT

Current Draw	23 mA Fan: 14 mA Max.
Internal Fuse	None
SONA Cell Quantity	1 or 2
SONA Cell Material	Glass and Stainless Steel
SONA Cell Size	40mm (1-5/8")
Dimension	90mm (W) x 75mm (H) x 140mm (D) 3.5" (W) x 3" (H) x 5.5" (D)

Note: All specifications subject to change without notice.

Disposal of Electric and Electronic Equipment

(Applicable in the EU and other European countries with separate collection systems)

This equipment contains electric and/or electronic parts that can be disposed of as normal household waste.

Further information about the subject is available at your community administration, your local waste collection company, or in the store where you purchased this equipment.



HealthySpaces. Net (602) 613-4310



